

## Remote Control Programming by TV Brand

1. Turn on TV
2. Press and hold **BOTH** the 1 and the 3 buttons at the **SAME** time on the remote control for approximately 3 seconds until the TV standby button remains lit, then release both buttons.
3. Now enter the 4-digit manufacturer code for your TV set. On each digit entry the TV standby button will flash. On entry of the 4<sup>th</sup> digit the TV button will flash then remain lit.
4. Point the remote control at the TV set and press and **HOLD** down the TV button.
5. When the TV either turns off **or** brings up the MUTE symbol on screen, then release that button (TV).
6. Press and hold the TEXT button and then at the **SAME** time press the STOP button to lock in the code.
7. The TV button will go out, the remote is now programmed.

DIGIT	BRAND
1368	Insignia
1628	LG
1706	Magnavox
2158	Panasonic
2195	Phillips
2448	Samsung
2462	Sanyo
2550	Sharp
2679	Sony
3211	Vizio
3249	Westinghouse



## TV Control setup: Auto Search

Should the TV brand not be successfully found by the Brand Search method then Auto Search can be used.

Make sure your TV is turned on.

1. Press and hold **BOTH** the 1 and the 3 buttons at the **SAME** time on the remote control for approximately 3 seconds until the TV standby button remains lit, then release both buttons.
2. Point the remote control at the TV set and press and **HOLD** down the TV Standby Button.
3. When the TV turns off, then release that button. **This may take 5 minutes to happen.**
4. Press and **hold** the **TEXT** button and then at the same time press the **STOP** button to finish setting up the TV control. The TV standby button will go out, the remote is now programmed.

